
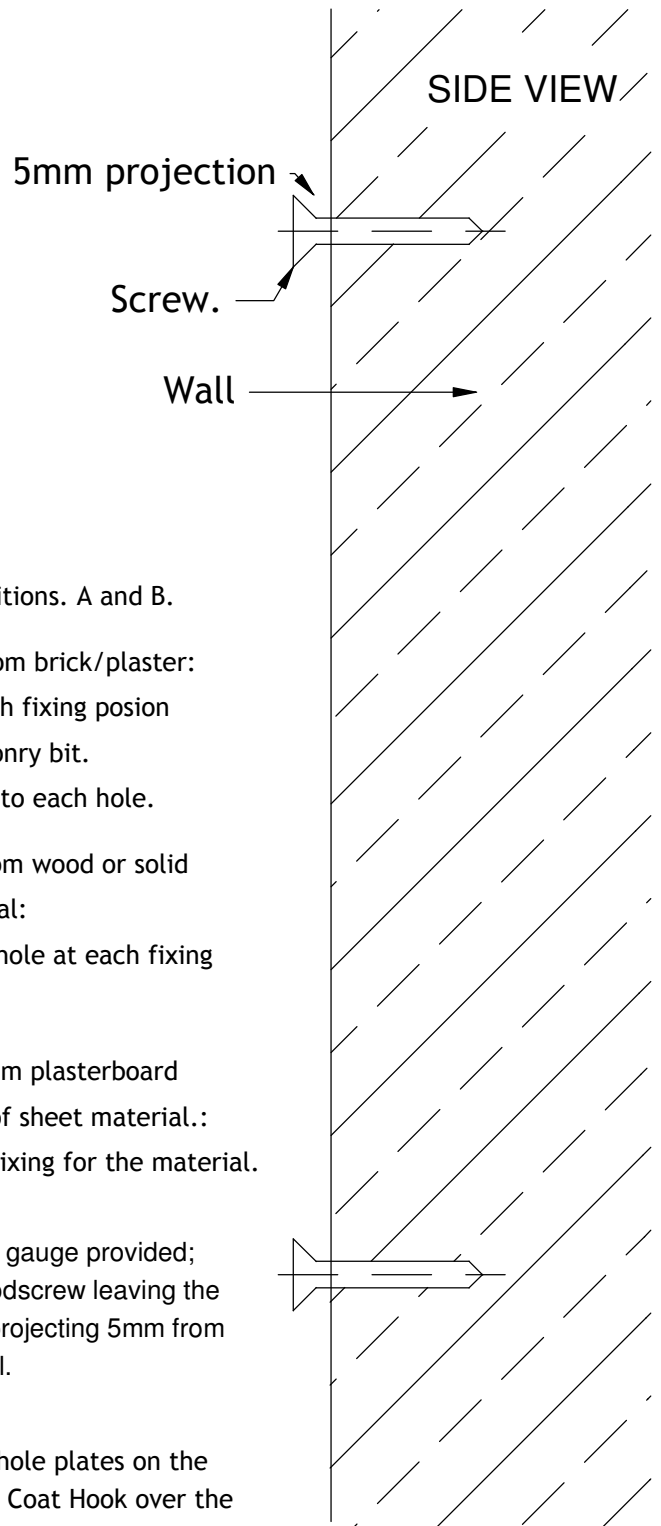


# Hat & Coat Hook.....fixing Instructions

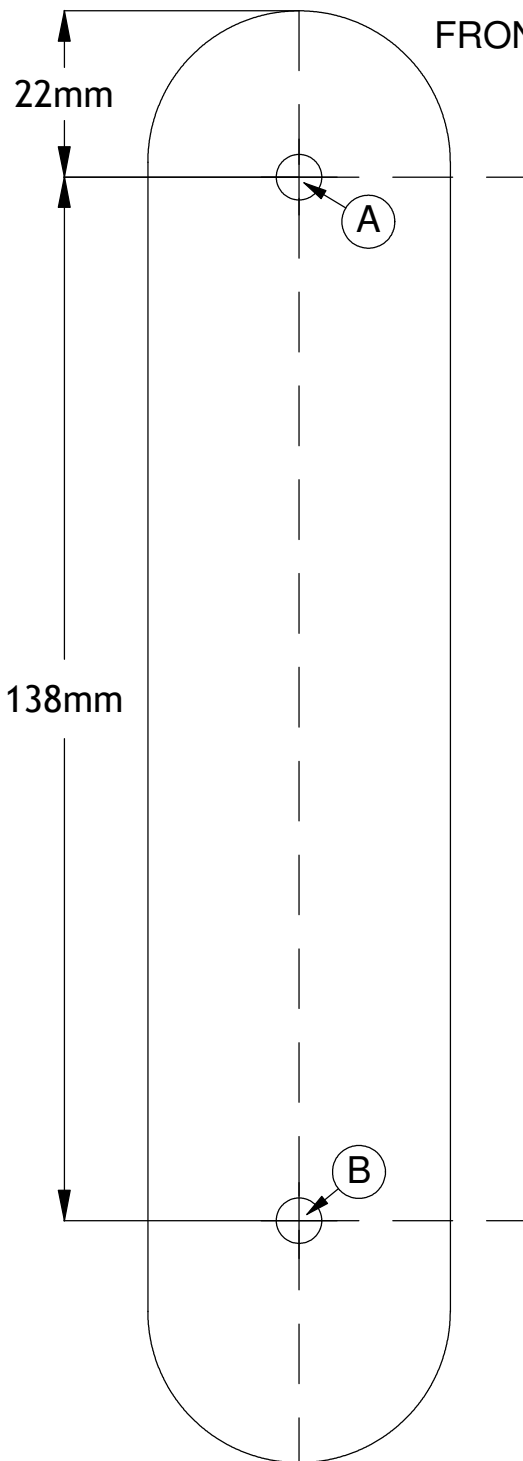

1. Mark fixing positions. A and B.

If wall is made from brick/plaster:

Drill a hole at each fixing position using a 7mm masonry bit.

Insert wall plug into each hole.

If wall is made from wood or solid type sheet material:

Drill a 3mm pilot hole at each fixing point.

If wall is made from plasterboard or a similar type of sheet material.:

Use an approved fixing for the material.

2. Using the depth gauge provided; screw in each woodscrew leaving the the screw heads projecting 5mm from the face of the wall.

3. Locate the keyhole plates on the back of the Hat & Coat Hook over the screws in the wall. The Hat & Coat Hook should be a loose fit at this stage.

4. Remove the Hat & Coat Hook, wind the LOWER screw in about 1/8th of turn (or less). Refit the Hat & Coat hook. The fit should be a bit tighter. Repeat this stage until the Hat & Coat Hook fits snug to the wall and is easy to locate. Loosen the screw a little if the fit is tight or the screw doesn't drop into the vertical part of the keyhole plate.

5. Remove the Hat & Coat Hook. Repeat stage 4 for the UPPER screw. This time the final fit should be adjusted so that the fit to the wall requires light gentle pressure for final location. Gradual and micro adjustment of the screw(s) will result in a fit which is firm enough not to move when in use.